



Hints:

- mount the 100nF caps close to the rectifier bridge
- mount the 6.8uF MKT caps close to the 15mF elcaps
- if you use a metal housing then connect the safety contact with the housing

AH Pre-1: external power supply	
TITLE: psex	
Document Number:	REV:
Date: 1/10/2000 23:03:58	Sheet: 1/1